

# NOVA

## Remote Control Guide (US)



## Table of Contents

### OVERVIEW

- 2 Remote Control
- 5 Controlling Your Devices
- 6 Program Remote to Control Your Devices
- 7 Auto Search Procedures
- 8 Setup Keys Punch Through Procedures
- 8 Reset Punch Through Procedures
- 8 Reset Procedures

### POWERING UP

- 9 Setting up Remote Control

### APPENDIX

- 10 Troubleshooting
- 11 Device Codes: Audio-Amplifier
- 11 Device Codes: Audio-Accessory
- 11 Device Codes: Audio-Receiver
- 12 Device Codes: Television
- 15 Device Codes: TV Combo
- 16 Device Codes: Video-VCR
- 16 Device Codes: Video-DVD
- 17 Device Codes: Blu-Ray Disc

- 19 Declaration of Conformity

#### COPYRIGHT NOTICE

COPYRIGHT © 2016 Entone, Inc. All rights reserved.

This document contains proprietary information protected by copyright. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written consent of Entone, Inc., 20863 Stevens Creek Blvd, Suite 300, Cupertino, CA 95014, U.S.A.

ENTONE, AMULET, KAMAI, MAGI and "Connecting the Home" are trademarks of Entone, Inc.  
Amino is a trademark of the Amino group of companies.  
All other trademarks or registered trademarks belong to their respective owners.

#### Disclaimer


Entone shall not be liable for any errors contained herein nor for any damages arising out of or related to this document or the information contained within it, even if the Company has been advised of the possibility of such damages. This document is intended for informational and instructional purposes only. The Company reserves the right to make changes to the specifications and other information contained in this document without prior notification.

#### Warranty

A warranty for your product is offered through your service provider, or the supplier from which you obtained it. In the case of your product requiring servicing, please contact your service provider directly.

P/N: 99-709801-04 - V1.2

## OVERVIEW REMOTE CONTROL

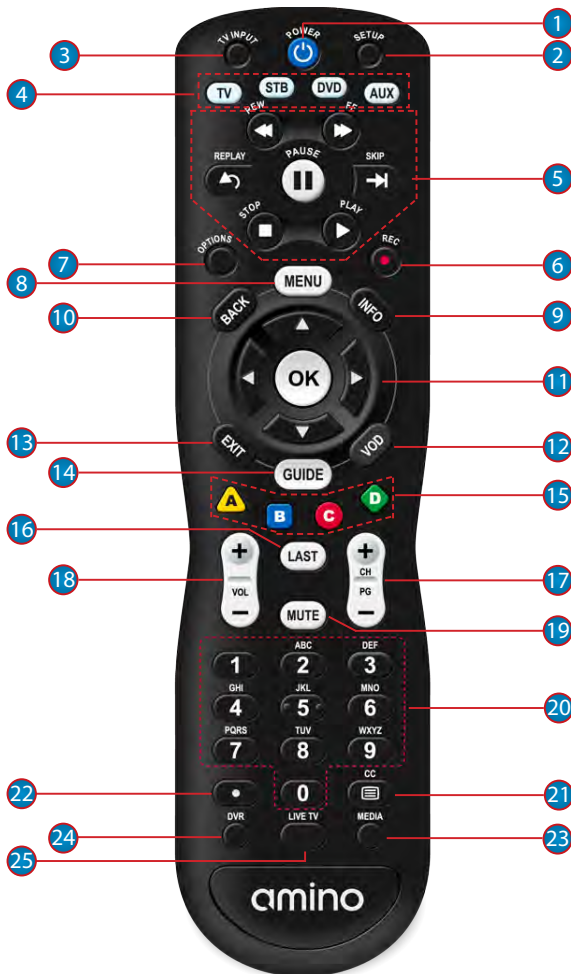

Button(s)	Description
1	POWER Switches the power on/off for the currently selected device Switches STB to power on or standby mode
2	SET UP Set up remote for TV
3	TV/ INPUT Changes the current A/V input of the selected device programmed (i.e. TV or AUX)
4	DEVICE CONTROL TV: Select to control TV (if programmed) STB: This button is pre-programmed to control the Entone device DVD: Select to control DVD (if programmed) AUX: Select to control another device (if programmed)
5	TRANSPORT KEYS REPLAY: Goes back approx. 30 seconds REW: Rewinds video FF: Fast forwards video SKIP: Advances ahead in 30 second increments PAUSE: Pauses video PLAY: Plays video or resumes a paused program STOP: Stops playback of video
6	REC Starts or stops recording a program
7	OPTIONS Provides additional options for certain on-screen menu or highlighted items*
8	MENU Displays on-screen menu or home screen
9	INFO Displays on-screen information about the current TV / VOD / DVR program
10	BACK Goes back one level within menus *
11	NAVIGATION ARROW KEYS: Navigates within the on-screen guide/menus OK: Executes the currently selected menu option LEFT/RIGHT: Rewinds/Fast forwards video
12	VOD Feature enabled by your service provider (contact service provider for details)
13	EXIT Exits the current menu item or back to LIVE TV
14	GUIDE Displays the on-screen program guide


Availability of certain features is dependent on your service provider

Button(s)	Description
15 SHORTCUT	Color-code buttons correspond to features that are enabled by your service provider (contact service provider for details)
16 LAST	Changes channel to the previously viewed channel
17 CH/PG	Changes channel up/down or pages up/down within the on-screen program guide
18 VOL +/-	Increases or decreases TV volume
19 MUTE	Turns TV volume on/off
20 NUMBER KEYS	Allows direct access to specific channels and menu items
21 CC	Toggles closed captioning on/off
22 DOT	Used when entering a period in certain channels Displays on-screen keyboard for certain applications
23 MEDIA	Feature enabled by your service provider (contact service provider for details)
24 LIVE TV	Feature enabled by your service provider (contact service provider for details)
25 DVR	Feature enabled by your service provider (contact service provider for details)

Availability of certain features is dependent on your service provider

## CONTROLLING YOUR DEVICES

The Nova remote control can be used to control other devices (e.g. TV) as well. It uses InfraRed (IR) light signals to control other devices. IR signals travel only short distances (10 meters or less), and cannot go through walls or other solid objects. You must point the remote directly at these devices, with no objects blocking the line of sight.

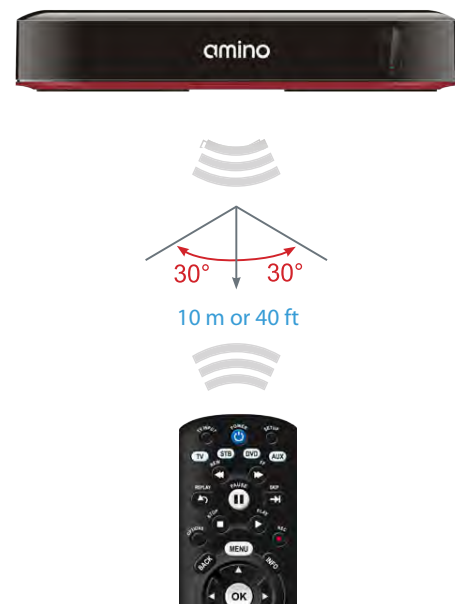

## PROGRAM REMOTE TO CONTROL YOUR DEVICES

You can program the Nova to control other devices by

1. Locate the device code for your device in the Device Codes table provided in the Appendix starting on page 11. If you cannot find the device code for your device or it does not work after trying the listed device codes for your device brand, then you can try the auto search on page 7.
2. Turn on your device.
3. On the remote control, press the Device Control key (TV / STB / DVD / AUX) to choose the device mode.
4. Press and hold the "SETUP" key until the LED blinks twice.
5. Enter the five-digit device code for your device. If you perform this procedure correctly, the LED will blink twice. Otherwise, it has a long blink.
6. Press the "Power" key. If your device turns off, setup is complete.
7. If your device does not turn off, repeat this procedure using the next code for your device brand.

Record working codes here

TV code	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
DVD code	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
AUX code	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>

## AUTO SEARCH PROCEDURES

If your device does not respond to the remote control after trying all device codes listed for your brand, or if your brand is not listed, try searching for your device code as follows:

1. Turn on your device.
2. On the remote control, press the corresponding Device Control key (TV / DVD / AUX) to choose the device mode.
3. Press and hold "SETUP" key until the LED blinks twice.
4. Press number keys "9" - "9" - "1".
5. Press "Power" key.
6. Press "CH +" key repeatedly until your device turns off.
7. Press and hold "SETUP" key until LED blinks twice to save the working code.

## KEYS PUNCH THROUGH SETUP PROCEDURES

By default, a key pressed on the remote control is sent to the selected device mode only. The punch through function allows specific keys to be sent to a particular device. (For example, the volume +/- key may need to be sent to the AUX device instead of the TV).

1. On the remote control, press and hold the "SETUP" key until the LED blinks twice.
2. Press number keys "9" - "7" - "8".
3. Press source device mode, e.g. TV.
4. Press keys to punch through, e.g. VOL + / -, MUTE.
5. Press target device modes, e.g. STB, DVD.
6. Press and hold the "SETUP" key until the LED blinks twice.
7. LED has a long blink in case of error.

## RESET PUNCH THROUGH PROCEDURES

1. Press and hold the "SETUP" key until the LED blinks twice.
2. Press keys "9" - "7" - "8".
3. Press and hold the "SETUP" key until the LED blinks twice.
4. LED has a long blink in case of error.

## RESET PROCEDURES

1. Press and hold the "SETUP" key until the LED blinks twice.
2. Press keys "9" - "7" - "7".
3. Press and hold the "SETUP" key until the LED blinks twice.
4. LED has a long blink in case of error.

## POWERING UP SETTING UP REMOTE CONTROL

1. Locate the two AA batteries and remote control in the accessory box.
2. To open the battery cover, press down on the battery cover latch and slide it off.
3. Insert the AA batteries, matching the "+" and "-" marks on the batteries to the "+" and "-" marks on the interior of the remote control.
4. Snap the battery cover back onto the remote control.



## APPENDIX TROUBLESHOOTING

Problem	Solution
The LED does not blink when a key is pressed	Replace the batteries with two (2) new AA batteries
LED blinks when key is pressed but TV or STB does not respond	Make sure you are aiming the remote control at your device and that you are within 25 feet of the device you are trying to control
The remote control does not control TV functions	Follow "Controlling your tv" on page 5 to program the remote to control your TV
The LED blinks 5 times with each key press	The batteries need replacement. Replace the batteries

## DEVICE CODES

Your Nova Remote Control can control many brands and models of devices. The following pages list device codes for many brands of devices. Many brands list more than one code, and you may need to test several codes to find the best match for your devices. Your devices may be supported even if your brand is not shown in the list below. If you cannot locate your brand, or none of the listed device codes works, then you may still use the "Auto Search Procedures" on page 7 to try to locate a suitable device code.

<b>AUDIO - AMPLIFIER</b>	LG	33217, 33996	Carver	30189, 30121, 31189
Denon	32706, 32134	Martin Logan	33526	31389, 32748, 33218
Durabrand	31568	Onkyo	33984, 33992	31389
Halcro	31934	Panasonic	33323, 33409	31389
Harman/Kardon	30892, 33045	Philips	33962, 32675, 33282, 34012	32857, 31360, 32516, 33347, 32820, 32279
Left Coast	30892	Pinnacle Speakers	33774, 33728	32971
Marantz	32138, 30892, 31892	Pioneer	33956	Dynex
Memorex	31568	Polk Audio	33429	Epworth
Optimus	30823	Proficient	33661	30121, 31641, 30158, 30189
Parasound	31934	RCA	33969	Gateway
Philips	30892	Samsung	32660, 32609	GE
Pioneer	30823	Sharp	33736, 33097	General Electric
Polk Audio	30892	Sonos	33919	33297
RCA	30823	Sony	33700, 32610	Harman/Kardon
Regent	31568	SpeakerCraft	33661	32241, 31304, 32443, 33418, 30189, 32670
Sony	33903	Toshiba	33627	32175, 31030, 32169, 32472, 32929, 32966, 33210, 31077
Apple	31115	VIZIO	32454	31805, 32730, 31320, 32503, 30135, 31298
AudioSource	33721	Yamaha	32458, 32021, 33153, 33917	JBL
B & W	33943	ZVOX	32332, 33913, 32334	32241
Bose	33708	<b>AUDIO - RECEIVER</b>		Jensen
Boston	33698	Aiwa	30121, 31641, 30158, 30189	31389
Acoustics		Alco	31390	JVC
Bowers & Wilkins	33943	AMC	31077	31676, 32040, 31374, 32331, 32239, 31871, 33115, 33274
Curtis	33942	Anthem	33294	31570, 31313, 30186, 31293
Definitive Technology	33645	Anthem Statement		Kenwood
Denon	32502	Arcam	31189, 30189	KLH
Dynavox	33231	Audiotronic	31189	31390
Haier	33516	Audiovox	31390	LG
Harman/Kardon	33517	Bose	31933, 31629, 33959	32197, 32676, 32284, 33285, 31293
iLive	33175			Linn
Insignia	33951			30189
JBL	33756, 33535			
JVC	33049			
Klipsch	33915			

Magnavox	30189, 31189, 31831	Thorens	31189	Baysonic	00180	Daytek	02241		00051, 00178, 00765		00171, 00463, 01385, 01660,
Marantz	31289, 32114, 30189, 31189	Toshiba	31788, 31123	Bell & Howell	00154	Dell	01403, 01863, 01264	General Electric	00451, 01547, 01447, 01347, 00051, 00178, 00765		01963, 02184, 02416, 02751, 03227
McIntosh	31289	Venturer	31390	BGH	04029, 00898, 32426	Denon	04070, 02414, 01765				
Micromega	31189	Vtrek	32426		00876, 03485, 04028, 04030	Digital Lifestyles	01892, 01665	GFM	00171, 01665, 01963, 01886, 01864, 01865	Inteq	00017
Myryad	31189	Wards	30158, 30189	Blue Sky	02153, 03997	Disney	01398			iRIS	02189
Nakamichi	31313	Yamaha	32061, 32467, 33030, 30176, 31276, 30376, 31389	Bradford	00180	Dumont	00017			IRT	00451, 01661
Norcent	31389		31276, 30376, 31389	Britânia	02414	Durabrand	00463, 00171, 01570, 01665, 00178, 00180	Gibraltar	00017	iSymphony	03429, 03382, 03118, 03094, 03227
Onkyo	31805, 31320, 32730, 32503, 30135, 31298	Zenith	31376, 30186, 31293, 32197	Broksonic	00463, 01935, 01938, 01892			GoldStar	00178	JC Penney	01347, 00051, 00178, 00156
Optimus	31023, 30186			CCE	03782, 04091, 00623, 04092	Dynex	02049, 01463, 02184	GPX	03980, 03977, 03196	JCM	02189, 02256, 03863
Panasonic	32967, 31275, 31288, 31633, 32452, 33055, 33309, 31763, 32745, 32105, 31308, 31676, 31390, 31831	<b>TELEVISION</b>	888	Celera	00765	Electrograph	01755, 01623	Gradiente	01369, 01029	Jensen	01326, 03204, 00761
Philco	30189, 32459, 31831, 32289, 31266, 32311, 31189	Acer	01339, 04143	Champion	01362	Electrohome	00463, 01570, 01670	Grundig	00672		
Philips	31831, 32289, 31266, 32311, 31189	Admiral	04030, 03485, 04111, 00093, 00463	Changhong	03814, 00765	Electron	02466, 02855	Grunpy	00180	JVC	01774, 01601, 02321, 02271, 01253, 00053, 03650, 00463, 01670, 03841, 04070, 02264, 00650, 01892
Pioneer	31123, 31935, 31384, 32432, 31023, 32612	Advent	00761, 01570	Cineral	00451	Elektra	00017, 01661	Haier	01749, 02309, 01748, 03382, 01753, 03429, 02293, 02876, 03987, 04120, 01570, 03204	KC	04182
Polk Audio	31289, 30189	Affinity	03717, 03716, 03870, 03577	Clizen	01935	Element	03559, 01687, 02183, 02964, 01886			KDS	01498, 01687
Proscan	31254	Aiwa	01362	Clarion	00180	Elite	03867	Hallmark	00178	KEC	00180
RCA	31254, 32041, 32611, 32426, 33297, 32855, 31123, 31390, 32719, 33281, 31023	Akai	00702, 01675, 00812, 01385, 00672, 01935, 00765	Claris	03807	Emerson	01864, 01394, 03623, 00171, 00463, 01963, 00180, 01913, 01886, 00178, 01944, 00623, 01661, 01665, 02183, 00451, 00154, 03559	Hannspre	01351	Ken Brown	04056, 04099
Samsung	31868, 32809, 33154, 32137, 31500, 31304	Alfide	00672	Coby	03478, 03627, 02315, 02344, 02306, 02314, 02338, 02326, 02340, 03629, 01538, 02347, 02348, 03202	Emprex	01765	Harvard	00180	Kioto	00785
Sansui	30189	America	04179	Commercial Solutions	01447	Encross	00876	Havermy	00093	KLH	00765
Sharp	30186	America Action	00180	Contec	00180	Envision	01589, 01365, 02087, 02014, 02621	H-Buster	03620, 03419	Kolin	01240
Sherwood	31077, 31905, 31517, 32169, 33120	Anam	00180	Contex	04053	Hitachi	01122	Hellos	00865	Konka	01939, 01385
Sherwood	32169	AOC	01589, 03720, 01365, 02014, 04170, 02087, 02402, 01590, 02479, 02621, 04184, 04185, 03707, 04101, 04169, 04173	Continental	01682, 03321, 04179	Hewlett Packard	01661, 01665, 00154, 03559	Hello Kitty	00451	Kreisen	00876
Newcastle	31622, 31759, 30158, 32172, 31758, 31822, 32475, 31058, 32522, 32860, 33257, 33372, 33456	Aomni	01623	Continental	03322, 03321	Himitsu	04179, 00180	Hewlett Packard	01642	Legend	02397, 02309
Sony	31622, 31759, 30158, 32172, 31758, 31822, 32475, 31058, 32522, 32860, 33257, 33372, 33456	Apex Digital	00765, 02397, 00748, 01217, 00890	Coradir	02844	Hisense	03519, 02183, 01660, 02098, 01314, 00748, 03382, 04029	Himitsu	04179, 00180	Lexus	03638
Stereophonics	31023	Ario	02397	Craig	00180, 03423	Hitachi	01643, 03644, 00145, 01145, 01345, 03639, 02277	Hitachi	01643, 03644, 00145, 01145, 01345, 03639, 02277	LG	02731, 01423, 01859, 02358, 00178, 03941, 03397, 04017, 02424, 01265, 03979, 01753, 00017
Sunfire	31313	Astar	01738, 01531	Crown	00180, 00672	Hitachi	01643, 03644, 00145, 01145, 01345, 03639, 02277	Hitech	01682, 01814, 01944, 01963	LXI	00154, 00156, 00178, 00017, 01347
Teac	31390	Asus	03340	Crown Mustang	00672, 00898	Hiteker	03382	HP	01642	MAG	01687, 01498
Technics	31308, 31633	Atvio	03638, 03636, 03653	Curtis	03577, 02855, 03121, 02466, 02352, 03895, 02397, 03939, 01326, 03636, 04035, 01314, 02559, 03228, 03382	Hyundai	03382	Hyundai	03418, 01814	Magnasonic	01913
		Audinac	00180	Curtis Mathes	00451, 00702, 01661, 00093, 00145, 00154, 01766, 01769, 02121, 03065, 00451, 00623	Fluid	02964	iLo	01665, 01684, 01990, 01463, 01286, 01394, 04183	Magnavox	01866, 03623, 02372, 02597, 01454, 01913, 01944, 01963, 01455, 01990, 03708, 00171, 01365, 00051, 01755, 01867
		Audiovox	02413, 01865, 00180, 01564, 01868, 01276, 01766, 01769, 02121, 03065, 00451, 00623	CXC	00180	Frigidaire	02231	Imperial	01990	Magnum	04179
		Auria	02087, 02014, 02277	Cytron	01326	Funai	01864, 00171, 00180, 01271, 01394, 01963	Initial	01990		
		Aventura	00171	Daewoo	01661, 00623, 00451, 00661, 00672, 00154	Futurtech	00180	Insignia	02049, 01641, 01564, 01326, 02002, 01423, 01892, 01517,		









	01769, 03065, 01868	Magnavox	02597, 01913, 01963, 01944, 02372, 01866, 03708, 01454, 00051, 01990	Sylvania	03894, 01963, 01944, 01913, 01886, 01864, 01394	Directed Video	20717	Microsoft	22083, 22627, 20522	Sony	21516, 21633, 21033, 20864, 21070, 20772
Blue Sky	02153					Disney	20675, 21270				
Broksonic	00463, 01935, 01938					Durabrand	23464	Mintek	20717		
Citizen	01935	Memorex	01938, 00463, 01670, 01924, 01927	Symphonic	01913, 01944, 01963	Dynex	22596	NAD	20741	SV2000	20675
Coby	02315, 02344, 03627, 02340, 01538, 02347, 03202, 02314 03321			Toshiba	01945, 02684, 03469, 01524, 00156, 01256, 00178	EletróVision	22822	Naxa	22235	Sylvania	20675
Continental		Mintek	01990			Emerson	20675, 22213	Nesa	20717	Symphonic	20675
Electric		Mitsubishi	00093, 00150, 00178			Fisher	20670	New Acoustic	20741	TCL	22587
Coradir	02844	Electric	00178	Venturer	01865, 01868	Funai	20675	Dimension		Teac	
Curtis	02855, 03895, 02466, 04035, 02559, 03636	Naxa	02104, 03382	Viewsonic	02049, 00864	Gateway		NKS	22834	Technics	20490, 20703
		Nikko	00154	Viore	03429, 02352, 03094, 02104, 03382, 03118	GE	20717, 20522	Ölevia	22331	Toshiba	20490, 20703
		Nimbro	02104			General	20717, 20522	Onkyo	22147, 21627, 20503, 21769		
		Nordmende	03835			Electric		Oppo	22545, 21224		
		Optimus	01927, 01913, 01924	Westinghouse	01300, 01712	GFM	20675	Panasonic	21641, 23641, 20490, 21579, 20703, 20503	TruTech	20675
Daewoo		Orion	01938, 01463	White	00463, 01913	Go Video	20869, 21044, 20741, 21075, 20744, 20833, 20717	Philco	20675	Urban	20503
Durabrand	00463, 00171	Panasonic	01927, 01947, 01924, 01941, 02050, 01231, 01636, 01480, 00051, 00093, 00178, 03825	Westinghouse				Philips	22056, 22434, 20646, 21354, 20539, 21506, 23488, 20503, 22084, 20675	Venturer	
Dynex	02049, 02184			Xococo	01753	GoldStar	20741, 20869			VIZIO	22563
Electrohome	01670			Zenith	00017, 00178	GPX	22235			Vtrek	22587
Element	02964					Greenhill	20717			WB Electronics	22555
Emerson	01886, 01864, 01963, 01913, 00463, 01944, 01394, 00171 01944, 01963	Philco	01963	<b>VIDEO - VCR</b>		Grundig	20539	Pioneer	22442, 22854, 21571, 20142, 20831	Xbox	22555
		Philips	02597, 01394, 01455, 02372	Humax	20739	Harman/Kardon	20702, 20582, 21229, 22927, 23228			Yamaha	22083, 22627, 20522
ESA				Philips	20739						
Favi	03382			TiVo	20739	Hello Kitty					
Funai	00171, 01394, 01963	Polaroid	01769, 01523, 01538, 03942, 01766, 04074, 02002	<b>VIDEO - DVD</b>		Hitachi	20664, 20573				
GE	00051			Accurian	20675, 21416	Hiteker	20672	Polaroid	21013		
General	00051	Prima	01753	Alco	20869	Initial	20717	Polk Audio	20539		
Electric		Proscan	02256, 03895, 03429, 03636	Allegro	20869	Insignia	22596, 22095, 22428, 20675, 21013, 20741	Presidian	20675, 21738		
GFM	01963			Amvox	22840			Procead	20672	Zenith	20741, 20869, 20503
GoldStar	00178			Apex Digital	20672, 20717	Integra	22147, 21769	Proscan	20522		
GPX	03980, 03977, 03196	Pyle	02196	Asahi	22615	Irradio	20646	RCA	20522, 21013, 22919, 22587, 22213, 20717, 22871, 21769, 23464	<b>BLU-RAY DISC</b>	
Haier	01753, 02309, 03429, 01749, 01748	QuantumFX	02337	Audio Authority	22555	JBL	20702			Curtis Mathes	22331, 23925
		Quasar	00051, 01927, 01924, 00250	Audiovox	20717	JVC	22365, 22855, 20623, 21164, 20867, 21602	RE-BL	22555	Denon	22258, 22748
		RCA	04214, 02187, 02746, 02932, 02247, 00093, 01868, 02002, 03382, 00051, 01447	BBK	21224			Rio	20869	Harman/Kardon	22927, 23228
Hisense	03519			Bel Canto	21571			Rotel	20623	Insignia	22596, 22428, 20675
Hitachi	03644			Design		Kawasaki		Samsung	20199, 20573, 22069, 21075, 21573, 21470, 22213, 22269, 22369, 22329, 22489, 21044, 22843, 22556, 20744, 20490	Integra	22147
iLo	01990			Blaupunkt	20717	Kenwood	20534, 20490			JVC	22365, 22855
Initial	01990			BuBuGao	21224	KLH	20717			Lexicon	22545
Insignia	02049, 01641, 01963, 02002, 02416, 02751, 03227, 01326, 01517, 01892	Samsung	02051	California Audio	20490	Konik	22691			LG	21602, 20741
		Sansui	01670, 01935, 03564, 01938, 03377	Labs		Lenoxx	22213			Magnavox	20675
iSymphony	03429, 03094			CineVision	20831	Lexicon	22545			Marantz	22414, 23444
JVC	02271, 01601, 01670, 01774, 01253	Sanyo	03488	Coby	22494, 22746, 21351, 20672	LG	21602, 20741, 20869, 22135			Memorex	22331
		Sceptre	02528, 04139, 02337	Cougar	22693	LiteOn	21738, 21416			Microsoft	22627
		Sens	01865	Craig	20831	Logitech	22639			Ölevia	22331
Ken Brown	04099	Sharp	00818, 00093, 02360	Curtis	22235, 23052	Magnavox	20675, 21354, 20503, 20646, 23488, 21506, 20539	Sanyo	20670	Onkyo	22147
Konka	01939			Curtis Mathes	22331, 23925			Schneider	20646	Oppo	22545
LG	02731, 01423	Superscan	01944	Daewoo	20833, 20869	Marantz	22481, 20539, 22414, 23444	Semp	20503	Panasonic	21641, 23641
LXI	00154	Supersonic	03593, 01753, 02104, 03595,	Days	22857	Memorex	22213, 20831, 23153, 21270, 22331	Semp Toshiba	20503	Philips	22434, 22084
Magnasonic	01913			Denon	22258, 22748, 20490			Sensory		Pioneer	22854, 22442, 20142
				DigitalMax	21738	McIntosh		Science		RCA	23464
				Diplomat	22814			Sharp	20630, 22250, 20675	Samsung	20199
								Sherwood	23052, 23837, 23925	Sharp	22250
								Sonic Blue	20869	Sherwood	23052, 23837, 23925

Sony 21516, 20772  
 Sylvania 20675  
 Toshiba 23157, 23857,  
 22705  
 VIZIO 22563  
 Xbox 22627  
 Yamaha 22298, 23837

## Declaration of Conformity

 	<p><b>Federal Communication Commission Interference Statement</b></p> <p>This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:</p> <ul style="list-style-type: none"> <li>• Reorient or relocate the receiving antenna.</li> <li>• Increase the separation between the equipment and receiver.</li> <li>• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.</li> <li>• Consult the dealer or an experienced radio/TV technician for help.</li> </ul> <p>This device complies with Part 15 of the FCC Rules. Operation is subject to the Following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p>The user is cautioned that changes and modifications made to the equipment without the approval of manufacturer could void the user's authority to operate this equipment.</p> <p>Déclaration de la Commission fédérale des communications (FCC) sur les Interférences</p> <p>Cet appareil a été testé et reconnu conforme aux limites pour appareils numériques de classe B, selon la partie 15 des règlements de la FCC. Ces limites sont destinées à fournir une protection adéquate contre les interférences nuisibles dans une installation résidentielle. Cet appareil produit, utilise et peut émettre de l'énergie radioélectrique et, s'il n'est pas utilisé conformément aux présentes instructions, peut causer des interférences nuisibles aux communications radio. Il est cependant impossible de garantir l'absence totale d'interférence dans une installation donnée. Si cet appareil cause des interférences nuisibles à la réception des signaux de radio ou de télévision (ce qui peut être vérifié en mettant l'appareil sous tension et hors tension), l'utilisateur est invité à corriger le problème en essayant l'une des solutions suivantes :</p> <ul style="list-style-type: none"> <li>• Réorienter ou déplacer l'antenne de réception.</li> <li>• Éloigner l'appareil du récepteur.</li> <li>• Connecter l'équipement à une prise d'alimentation d'un circuit autre que celui du récepteur.</li> <li>• Consulter le détaillant ou un technicien expérimenté en radio/télévision pour obtenir de l'aide.</li> </ul> <p>Cet appareil est conforme à la partie 15 des règlements de la FCC. Son utilisation est régie par les deux conditions suivantes :</p> <p>(1) cet appareil ne doit pas produire d'interférences nuisibles, et        (2) cet appareil doit accepter toute autre interférence, y compris celles qui pourraient entraîner un fonctionnement non souhaité.</p> <p>L'utilisateur est prévenu que les changements ou modifications apportés à l'équipement sans l'autorisation du fabricant pourraient annuler le droit de l'utilisateur à utiliser cet équipement.</p>
--	--

### Declaration of Conformity (Continued)

	<p>For Industry Canada Industry Canada statement</p>
	<p>This device complies with RSS-210 of the Industry Canada Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation</p>
	<p>Pour Industrie Canada Déclaration d'Industrie Canada Cet appareil est conforme à la norme RSS-210 d'Industrie Canada. Son utilisation est régie par les deux conditions suivantes : (1) cet appareil ne doit pas produire d'interférences nuisibles, et (2) cet appareil doit accepter toute autre interférence, y compris celles qui pourraient entraîner un fonctionnement non souhaité.</p>

### Notes



**COPYRIGHT NOTICE**

COPYRIGHT © 2016 Entone, Inc. All rights reserved.

This document contains proprietary information protected by copyright. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written consent of Entone, Inc., 20863 Stevens Creek Blvd, Suite 300, Cupertino, CA 95014, U.S.A.

ENTONE, AMULET, KAMAI, MAGI and "Connecting the Home" are trademarks of Entone, Inc.

Amino is a trademark of the Amino group of companies.

All other trademarks or registered trademarks belong to their respective owners.