


Settings



The Settings menu enables you to set viewing and hardware preferences for your TV service. You can change the settings for Caller ID, Parental Controls, and Autotune Alerts. This is where you also go to adjust your audio, video, and captioning settings and to reboot your digital box.

To access Settings, press **Menu** on your remote control, navigate the highlight to **Settings** and press **OK**. Next, enter your account password.

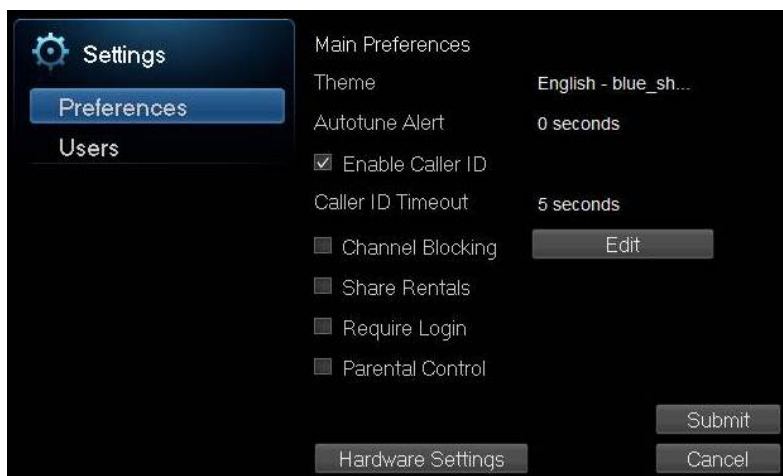

Enable Parental Controls

- Press **Menu** on your remote control, navigate the highlight to **Settings** and press **OK** on the remote control.
- Enter your account password and press **OK**.
- Navigate the highlight to **Parental Control** under the **Main Preferences**, press **OK** to check the box, navigate the highlight to **Submit** and press **OK**.

Modify Parental Controls Settings



- a) Navigate back to **Settings** and enter your account password. Arrow **Down** to **Users** and press **OK**. Arrow **Down** and highlight **Users**, press **OK**.
- b) Arrow **Right** and highlight **Parental Control**, press **OK**.
- c) Arrow **Right** and **Up/Down** to check the controls you want to activate for your family. Once you have finished your selections, arrow **Down** to **Submit**, and press **OK**.
- d) Press **Edit** on your remote control to leave **Settings**.

Turn Parental Controls Off/On

Parental Controls are active once you have enabled them in the **Settings Menu**.

- b) To turn **Parental Controls Off** or **On**, press **Menu** on the remote control, navigate the highlight to **Control On/Off**, and press **OK**.
- c) Enter your account password and press **OK** to update the **Parental Controls** status.
- d) Press **Edit** on your remote control to leave the **Menu**.